


Instructions for Technology Enhanced Classrooms

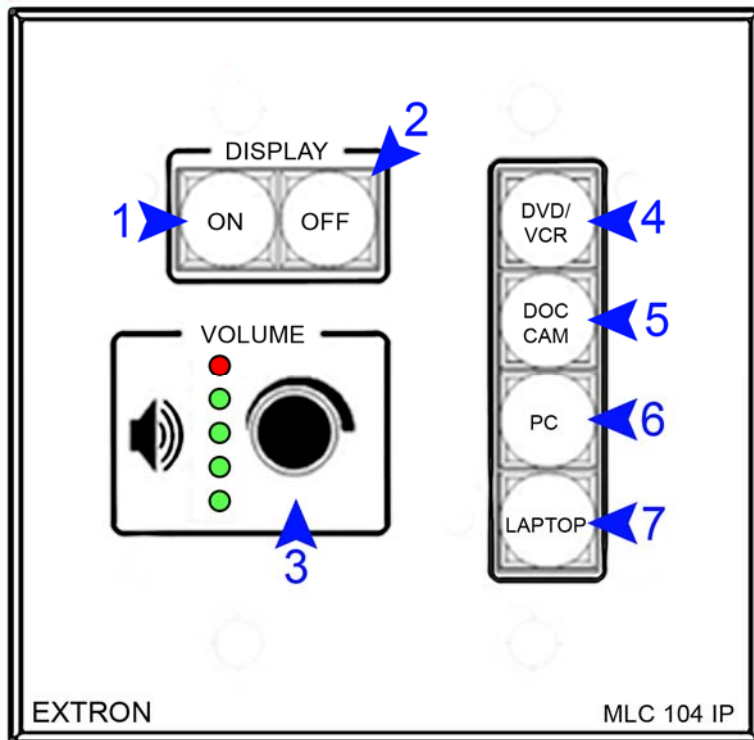

To Project the DVD/VCR

Press the Display ON button (1) and wait approximately 30 to 40 seconds for the projector to warm-up. Make sure the DVD/VCR player is in turned on. Insert DVD or VHS media. Press the DVD/VCR button (4) and wait for the projector to recognize the source. Press play on the DVD/VCR player. Adjust volume (3) if necessary.

To Project the Computer

Press the Display ON button (1) and wait approximately 30 to 40 seconds for the projector to warm-up. Turn the computer on. Press the PC button (6) and wait for the projector to recognize

the source. Adjust volume (3) if necessary.

To Project the Document Camera

Press the Display ON button (1) and wait approximately 30 to 40 seconds for the projector to warm-up. Turn on the Document Camera. Press the Doc Cam button (5).

To Project a Laptop

Press the Display ON button (1) and wait approximately 30 to 40 seconds for the projector to warm-up. Turn the computer on. Connect the laptop cables (VGA and Ethernet) to the laptop. Press the Laptop button (7). Adjust volume (3) if necessary.

To Shut the System Off

Press the Display OFF Button (2) (Off button will stop flashing when system is completely off)

Please call the INSTRUCTIONAL NETWORK with any classroom technology issues.

X4681 – X4657 – X4664 – X2505